



# Installation Instructions 4" AND 6" DRAIN GRID

**NEWPORT BRASS**  
Flawless Beauty. From Faucet to Finish.™

Model No: NWP 233-401, 233-402, 233-403, 233-404, 233-405  
233-406, 233-407, 233-408,  
NWP 233-601, 233-602, 233-603, 233-604, 233-605  
233-606, 233-607, 233-608

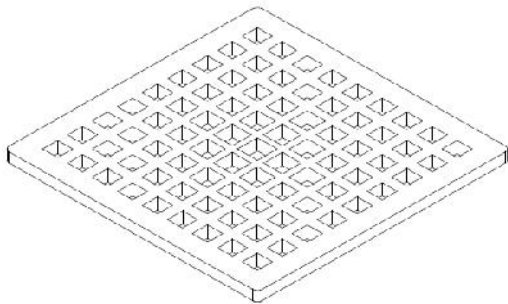

**233-401 SHOWN**

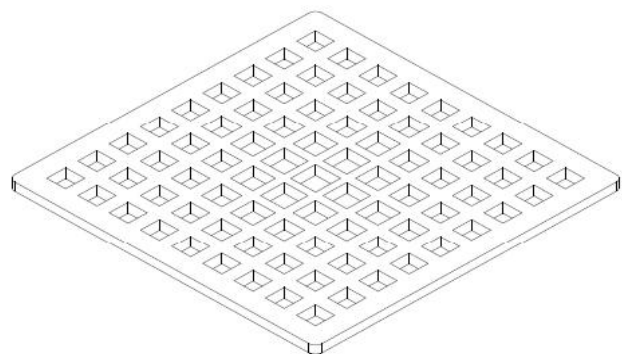

**233-601 SHOWN**

2001 CARNEGIE AVE, SANTA ANA CA 92705

NWP-233-401

(949) 417-5207

04/18/14

[WWW.NEWPORTBRASS.COM](http://WWW.NEWPORTBRASS.COM)

# INSTALLATION INSTRUCTIONS

## GRID INSTALLATION

1. After completion of finished flooring, remove plastic MUDGUARD [10] by drilling a hole in the center and pull out. (see figure 1)
2. Place decorative DRAIN GRID onto drain THROAT ASSEMBLY [8] (see figure 2).

## GRID REMOVAL

1. Use flat screw driver as a lever to lift grid (see figure 3)

